





Systems

ENGZ22XE	Engine Z22XE	PU	Fuel pump
----------	--------------	----	-----------

Components

F18	Fuse	P67	Sensor - Pedal position
K44	Relay - Fuel pump	Y7.1	Injection valve - Cylinder 1
K69	Control unit - Simtec	Y7.2	Injection valve - Cylinder 2
K114	Relay - Engine (main relay)	Y7.3	Injection valve - Cylinder 3
M21	Pump - Fuel	Y7.4	Injection valve - Cylinder 4
M71	Pump- Fuel, additional	Y26	Throttle valve positioner
P44	Air mass meter	Y34	Solenoid valve - Tank ventilation

Connectors

X1	Instrument panel & Body	X75	Body & Pump, Fuel
X3	Instrument panel & Engine	X83	Engine & Control unit - Simtec
X26	Body & Tank, fuel	X84	Instrument panel & Control unit - Simtec

Grounding Points

1	Body, front, left	9	Engine
6	Body, rear, left		

Abbreviations

30	Constant voltage	NB	Notchback
30A	30 Ampere	RHD	Right-hand drive
FV3	Main fuse FV3	Y25DT	Engine Y25DT

KSP	Fuel pump	Y26SE/Y32SE	Y26SE/Y32SE engines
KW	Estate	Z22XE	Engine Z22XE
LHD	Left-hand drive		

Color codes

BKRD	Black-Red	BNWH	Brown-White
BKWH	Black-White	BNYE	Brown-Yellow
BKYE	Black-Yellow	BUBK	Blue-Black
BN	Brown	BURD	Blue-Red
BNBU	Brown-Blue	RD	Red
BNGN	Brown-Green	RDBU	Red-Blue
BNGY	Brown-Gray	RDWH	Red-White
BNRD	Brown-Red		



This document was created with the Win2PDF "print to PDF" printer available at
<http://www.win2pdf.com>

This version of Win2PDF 10 is for evaluation and non-commercial use only.

This page will not be added after purchasing Win2PDF.

<http://www.win2pdf.com/purchase/>